



## STORM SMALL LONG

datasheet



Lighting design: LICHTMEESTERS | Interior architect: GUY DE VOS

The STORM SYSTEM® collection is carefully designed to flush the surface of any ceiling or wall, and all products will appear with an absolute minimum of tolerance and visibility.

The light fixture is designed to rotate 360° and allows a 23° adjustment along the.

## GENERAL DATA

### Collection

STORM SYSTEM®

### Product

Storm Small Long

### Article no.

- 1N00.0103.xx04

## SPECIFICATIONS

### Weight

5.64 oz / 9.17 oz

### Material




Aluminium / Brass

### IP protection grade

IP20

### Safety distance

0,3m

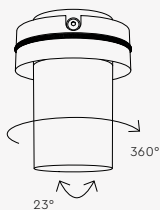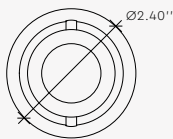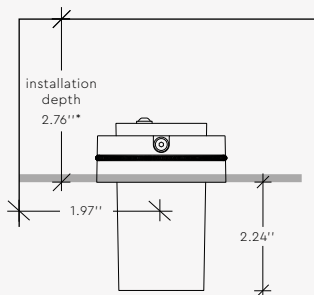

\*Installation depth doesn't include driver. Please check driver specification.

\*\*Installation depth can be reduced to 2.17" if heat shrink crimping cable connection is used.

## ELECTRICAL SPECIFICATION

Supply

Constant Current | max. rating 5W

Insulation class

Class III



Labelling



Conforms to ANSI/UL  
Std. UL 2108:2015

Cert. to CAN/CSA  
Std. CSA C22.2#250.13:2017

## ADDITIONAL REQUIREMENTS: (not included)

### LIGHT ENGINE

#### Single Colour

1AL.01.27 - 5W | 130mA | 2700K | 30°

1AL.01.30 - 5W | 130mA | 3000K | 30°

#### Installation depth

2.76"\*\*\*

#### Dim To Warm

1AL.01.DW - 5W | 270mA | 3000-2000K | 24°

#### Installation depth

2.76"\*\*\*

### Junction kit

For further support contact LITES ON WEST  
274 Madison Ave, #1305, NY, 10016  
T: 212 775 6363 | F: 212 775 0355  
E: info@litesonwest.com

## NOTE:

This product shall always be powered by SELV LED driver, output voltage of this driver in open circuit must not exceed 60V. Do NOT cover the LED driver or locate LED driver on top of light fixture.

When using honey combs the light output will be reduced by 30% in efficiency.

For IES/LDT lux files review the chosen Light Engine technical information.

**ATTENTION** - external driver location is recommended.

## ADDITIONAL REQUIREMENTS: (not included)

**Installation rings** - choose one of the installation rings below

- Storm Small Plaster Ring - 1A00.0002.01
- Storm Small Back-Mounted Ring - 1A00.0049.xx
- Storm Small Back 007 Ring - 1A00.0047.04
- Storm Small Extension S120 - 1A00.0017.xx
- Storm Small Extension S300 - 1A00.0035.xx

## XX - COLOUR CODE

- Full colour (Alu or Brass)



01 - white\*\*\*



06 - platinum\*\*\*



92 - black pearl



07 - carbon



08 - mouse grey



33 - nature\*\*\*\*



09 - earth



34 - antique\*\*\*\*



05 - amber



35 - night\*\*\*\*

(\*\*\*) Silver-coloured honeycomb for white and platinum finish

(\*\*\*\*) Brass is a natural product and colour will change over time





## COMPONENTS

- Storm Small Long
- Spring
- Honeycomb

## PLEASE NOTE:

If the spring on the fixture is damaged, do not proceed installation – contact your dealer

## IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed. Always make sure the main power is off during installation. Pay attention to the fixture remarks, and always make sure to use the correct voltage.

## CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

## WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal

For more information, please contact [info@onea.dk](mailto:info@onea.dk)

## ASSEMBLY INSTRUCTION

### STEP 1


**Make sure main power is off!**

Pull back the spring



### STEP 2

Mount your chosen light source or socket, guide the wire/socket through the hole in the base of the fixture

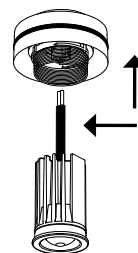

### STEP 3

Mount the Storm Long Tube, by gently rotating the tube into place.


#### ATTENTION!

Make sure the tube is rotated into the end position!

Rotation will require some force to get into the end position.

If the tube is loose, STOP the installation and contact your dealer – service or replacement will be required.

It is the installers responsibility to ensure that the tube is correctly rotated to the end position


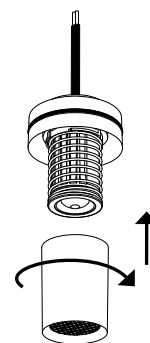


### STEP 4

Connect the supply cable with Storm Small Long's cable, then mount the fixture into the installation ring. Do this by slightly rotating the fixture.

**ATTENTION!** Make sure you are using the correct power supply according to the fixture.

**NOTE:** When rotating the fixture choose the direction with the least resistance.

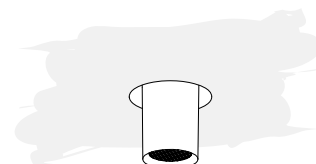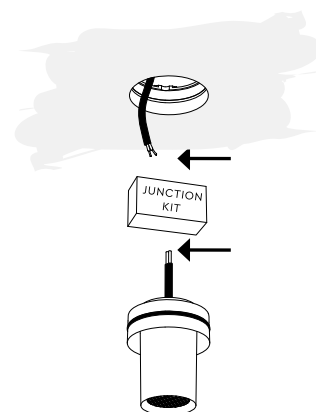

## DISASSEMBLY INSTRUCTION


### STEP 1

#### **Make sure main power is off!**

Take hold of the fixture and pull down gently, whilst slightly rotating.


#### **NOTE:**

When rotating the fixture choose the direction with the least resistance.

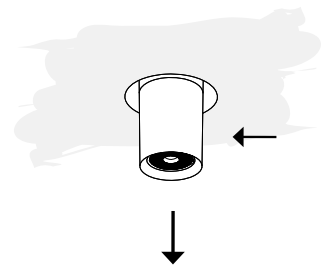

### STEP 2

Disconnect the cables.

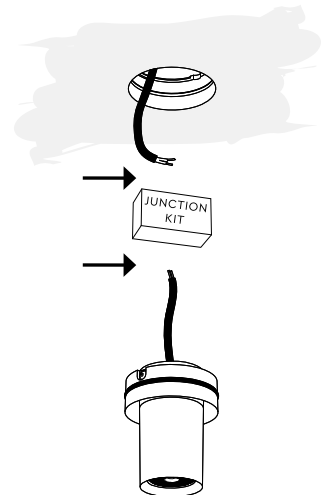

### IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed. Always make sure the main power is off during installation. Pay attention to the fixture remarks, and always make sure to use the correct voltage.

### CLEANING AND MAINTENANCE:

Use a soft moist cloth for cleaning. No further maintenance is required.

### WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal

For more information, please contact [info@onea.dk](mailto:info@onea.dk)